



Caution Of Power Terminal	
1	Do not strike the power terminal
2	Please apply silicone sealant to the power terminals if condensation appears.
3	Please use two wrenches to tighten the nuts on both sides of each terminal at once to prevent damaging the power bolt.

Caution Before Operation	
1	Verify the voltage and frequency.
2	Verify the capacity of cables and M.C.
3	Check the insulation of panel and motor.
4	Check the connections of compressor protectors of motor, discharge temperature and pressure.
5	Check the oil level.
6	Check the rotating direction of motor(during operation).
7	Verify the operating sequence of the solenoid valves (during operation).
While any abnormal conditions which occur during operation, stop and adjust them before restarting.	

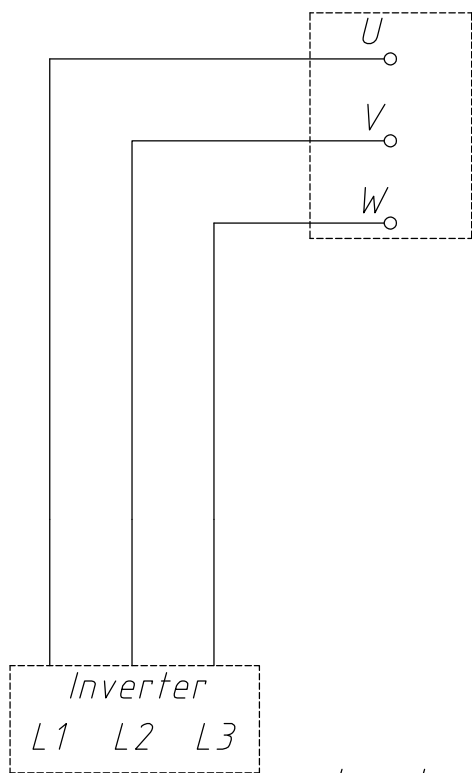


Inverter connection diagram

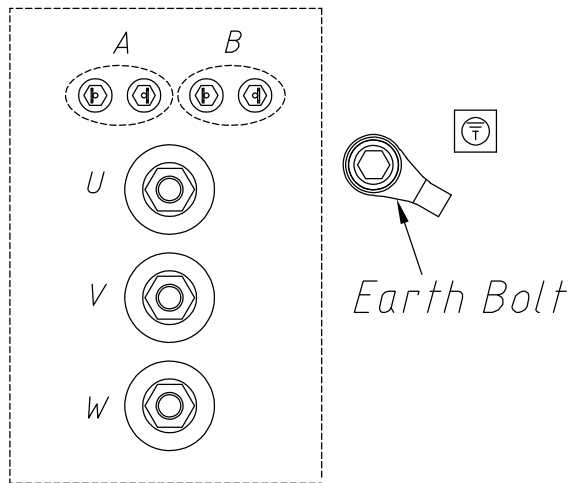

A:PTC

B:P+100Ω / P+1000Ω /NTC(Option)

Motor protector connection diagram

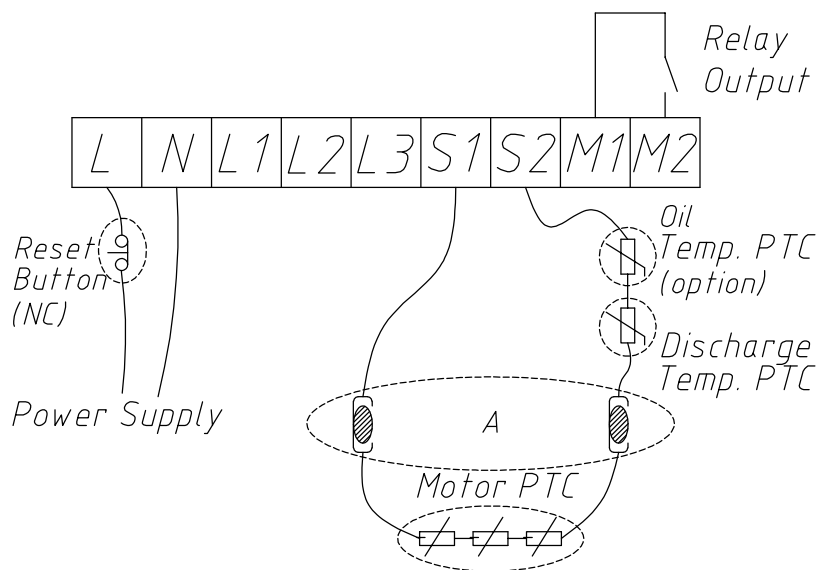

A Set: Motor PTC Terminal

INFORMATION

- Compressor standby : Green-light
- Compressor running : Green-light flash
- Error code :
 - PTC temperature error
 - Reset delay
 - Sensor input error
 - Supply voltage too low

Red-light	Orange-light
●○○○○	●○○○○
●○○○○	●●○○○
●○○○○	●●●○○
●●○○○	●○○○○
●●○○○	●●○○○
●●●○○	●○○○○

- Reset
 - In 24 hours,
 - 1st, 5±1mins delay
 - 2nd, 60±12mins delay
 - 3rd, lockout
- Voltage
 - L/L1, N/L2 : 50/60Hz 115~240V±10%